digital telephones co DK40, DK40i, DK28	e guide applies to DKT 2000-series onnected to Strata DK14, DK16, DK16e, 30, DK424 or DK424i systems. Your have all of the buttons/features uide.
information on butto	e System Administrator for more ons and variable entries with checkmark show you which features you have and exes appropriately.
need to press any a	ne when you lift the handset, you do not vailable directory, number or line button side or outside number.
Access Outside Li	ne and Call
1. Dial your access	code:
9	Assigned code
Line button	
2. Dial a phone number.	
Account Code Cal	ls .
Forced Account	1. Access an outside line.
	ls .
Forced Account Code	 Access an outside line. Enter the Forced Account Code. Listen for dial tone. Busy tone indicates an invalid code. Least Cost Routing (LCR) dialing: you will not hear a dial tone.
Forced Account	 Access an outside line. Enter the Forced Account Code. Listen for dial tone. Busy tone indicates an invalid code. Least Cost Routing (LCR) dialing: you will not hear a dial tone. Dial a phone number.

Automatic Busy Redial		
Activate	After dialing a busy outside phone number, press Auto Busy Redial or Cnf/Trn + #44 , then hang up. Your phone tries to call that number every 30 or 60 seconds, then signals you when the called number is available.	
Deactivate	Press Auto Busy Redial or press your primary directory number + #44 .	
Automatic Callback		
Activate	 After dialing a busy or Do Not Disturb station, or busy trunk group, press Auto Callback or 4. Hang up. The system calls you and rings the station or trunk group when it is available. 	
Deactivate	Press Auto Callback or press your directory number + #43 .	
Call Forward		
All Calls	Press Call Frwd All Calls, enter the number to forward calls to, then press Call Frwd All Calls againor press the primary or phantom directory button to forward, then press #601 + NNN + Spkr.	
Busy	Press Call Frwd Busy, enter the number to forward calls to, then press Call Frwd Busy againor press the primary or phantom directory button to forward, then press #602 + NNN + Spkr.	
No Answer	Press Call Frwd No Answer , enter the number to forward calls to; press	
	Call Frwd No Answer againor press Speed Dial + XX + Call Frwd No Answeror press the primary or phantom directory button to forward + #603 + NNN +Speed Dial + XX + Redial + Spkr	

Busy No Answer	Press Call Frwd Busy/NAns, enter the primary or phantom directory number to forward to; then press Call Frwd Busy/NAnsor press the primary or phantom directory button to forward + #604 + NNN + Speed Dial + XX + Redial + Spkror #604 + NNN + * + XX + Redial + Spkr
Cancel	Press the same Call Forward button or button sequence that you used to set Call Forwardor press a directory number button + #601 and hang up.
	ere you want calls forwarded. e phone rings before it forwards (optional).
Call Park Orbits	
Park a Call	While on a CO line call or internal call, press Park in Orbitor Cnf/Trn + #332.
	 2. Enter an orbit number 900~919 or a valid directory number. If you have an LCD telephone, enter 999, an available orbit is selected. 3. Hang up.
Retrieve a Parked Call	 Press Park in Orbitor from any directory number press #332. Enter the orbit number or extension where the call is to be parked.
Park a Call and Page	 While on inside or outside call, press Park and Pageor Cnf/Trn + #331. Enter the orbit number (900~919) or extension where the call is to be parked. If you have an LCD phone, enter 999 and the system selects an available orbit. Enter the Paging Access Code, announce the call and its location. Hang up.
Call Pickup	
Pick up ringing call / call on hold at another directory number	From any directory number, press #5#2 + the directory number that has the ringing or on-hold call (not available on all systems.)

Pick up a ringing priority call, a page, or ringing door phone	Press Directed Pickup or press a directory number + #5 . Then press #30 .
Pick up an external page	Press Directed Pickup or press a directory number + #5 . Then press #35 .
Pick up any ringing outside line	Press Directed Pickup or press a directory number + #5 . Then press 9 .
Pick up any ringing outside line on hold	Press Directed Pickup or press a directory number + #5 . Then press #7001~7200 . (See your System Administrator for the maximum number of CO lines for your system.)
Call Transfer with	Camp-on
Transfer a Call	 While on a call, press Cnf/Trn. Dial the directory number you wish to transfer to. Announce the call, then hang up. If the station is busy, "camp on" by hanging up. When the called number is available, the "camped on" party is connected. If the called party does not answer after a certain
Conference Calls	time, the call rings back to you.
Conference inside/outside call to a directory number	 While on a call, press Cnf/Trn. Dial a directory number or outside line. Press Cnf/Trn after the called party answers. All parties are conferenced together. If you added an outside line to the call, press Cnf/Trn again before hanging up to allow the outside parties to continue talking. (If you do not, the call is disconnected). Some outside lines do not disconnect when conferenced parties hang up. If so, press the flashing button to monitor the conference. If the parties are still on the line, press Cnf/Trn + Spkr, then hang up. Press Spkr to disconnect the lines.

Do Not Disturb	
Activate	Press Do Not Disturb (LED On).
Deactivate	Press Do Not Disturb again (LED Off).
Hold	
Place call on Hold	Press the Hold button.
Retrieve held call	Press the flashing line button or directory number button.
Place call on Exclusive Hold	While on a call, press Hold twice. (No one can accidentally pick up your call.)
Handsfree Answei	rback/Monitoring
Receive a Handsfree Answerback call	You hear a single warning tone followed by the caller's voice. Without lifting the handset, speak toward the telephone at a normal voice level.
Use Handsfree Monitoring	 While off-hook, on a call, hold down Spkr and place the handset on-hook. Release Spkr. Lift the handset to resume the conversation.
Fre	quently Used Numbers
Number	Name

TOSHIBA

© Copyright 2000 Toshiba America Information Systems, Inc. Telecommunication Systems Division 9740 Irvine Blvd., Irvine, CA 92618-1697

DKA-QR-DKTEL-VD 4010356

Version D.1, June 2000 Version D, May 2000 Version C, May 1999 Version B, December 1998

http://telecom.toshiba.com

Internal Call	
then dial a direct	or press the directory number button, tory number. Inouncement after you hear a single e called party answers.
Message Waiting	
Light Message Waiting LED at another station	After reaching a busy or unanswered station, press Msg or 7 to light the Msg button.
Answer a Message Waiting at your station	Press Msg , lift the handset. If the message sender does not answer, hang up and repeat this step to skip to the next message.
Cancel your station's Message Waiting light	Press a directory number button + #409.
Override/OCA	
Busy Override or Off-hook Call Announcement (OCA)	Press 2 after dialing the busy station. Or press 21 or 12 if the called telephone allows Off-hook Call Announce.
Busy Override or OCA (barge in)	Press 3 after reaching a busy station
Paging	
Make Page Announcement	 Lift the handset and press a directory number. Enter a page zone code (below):
All Call Page group	#30
Station groups	#311~#318
All Call Page group and external page zones	#39
External Page zones	#35~#38or #351~#358 Zone(s) depend on system size - see your System Administrator.

Redial	
Redial last number dialed	 Lift the handset, then press an available directory number or line Press Redial.
Save a number to Redial later	After dialing a telephone number (before disconnecting), press Save Last Number .
Redial a saved number	Access an outside line or press a primary or phantom directory numbe then press Save Last Number .
Soft Keys	
keys perform differe readout directly abo	hen active, the Mode , Page , and Scro ent actions as described by the LCD ove the keys. See the <i>Strata DK Digital</i> ide for more details.
Soft Keys On	Press Mode + 71 (when phone is idle)
Soft Keys Off	Press Mode + 70 (when phone is idle)
Speed Dial	
Store a Speed Dial number	 Do not lift the handset. Press Redial. Press any button labeled SD, there enter the phone number you wish to store; press Redialor press Speed Dial (or *), then enter a personal or System Speed Dial code (below). Then enter the phone number you wish to store; press Redial.
Speed Dial Codes	Personal: 10~49 System: 60~99 200~999
Make a call with Speed Dial	Lift the handset and press the SD buttonor lift the handset and press Speed Dia then enter the Speed Dial code.

